

Alto 200W Busker AMP

1. NO Wires or Power

Main Power Toggle – **OFF**

Mic Power – **OFF** (Slide – **DN**)

FX Select - **Bypass**

Phantom Power (+48V) - **ON**

Channel 1 Mic/Line – **MIC**

2. Connect (Power still OFF)

Insert XLR **Female** to MIC

Insert XLR **Male** to Chan 1

4. Send partner to correct

Distance and Direction

Move tripod and rotate

Speaker as needed

3. Add Power

Main Power Toggle – **ON**

Mic Power – **ON** (Slide – **UP**)

Tap Mic to confirm ON

Main and Chan 1 Volume

are preset to average

(4 Bars, Approx 80%)

5. Fine tune Main and Chan 1

Volume in same increments

(Pres and hold Chan Button -

For green volume lights

Red light indicates channel)

Old Karaoke Amp + Lav. Mic

1. Amplifier - Power OFF

Top+Bottom Volume at 12:00

All other Volume Dials OFF

2. Wireless Mic

Transmitter - Slide Power

Switch to on, Blue light on

Lavalier Mic – Press and

hold Top power button until

Blue light on steady

3. Add Power and Test

Main Power Toggle on, check

for Blue Light (Full Battery)

Wait for Audio to stop

(DO NOT REMOVE TAPE)

Tap Mic to Confirm On

Have partner go to test position

Fine tune top and bottom dials